SoundBot® Bluetooth Stereo Headphones SB250

User Guide

Thank you for buying the SoundBot SB250 Bluetooth Stereo Headphones from EyeCandis. These Headphones are designed to be convenient, stylish and provide high quality audio Playback from any Bluetooth enabled Audio Device or wired only device.

The SoundBot SB250 Bluetooth Stereo headphones can also be used to receive telephone calls while in use and will automatically pause the audio playback in order to receive the call and when the call ends audio Playback will resume.

Please read this user Guide thoroughly before use so that you can understand the setup and functions.

Contents

Please check your SB250 Bluetooth Stereo Headphones package contains the following items

- SB250 Bluetooth Stereo Headphones
- 3.5MM Audio Cable
- USB Charging Cable
- User Guide

Product Features

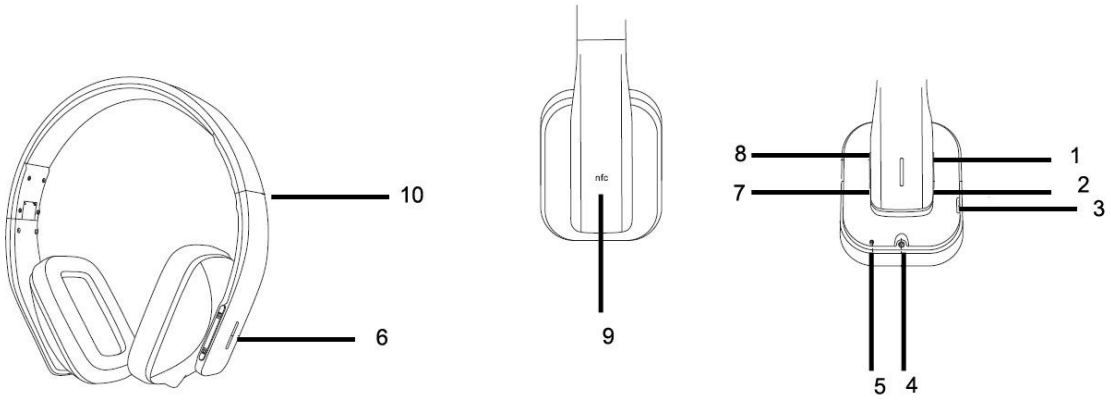

1. Volume Up
2. Volume Down
3. USB Charging connector
4. Audio Cable Connector
5. Microphone location
6. Multi-Function Button and LED Indicator

7. Skip track forward
8. Skip Track Backwards
9. NFC (Near Field Communication) Pairing position (Optional)
10. Folding Hinges

Setup

Note: Please fully charge the battery before 1st time use.

Turn on the Headphones

To turn on the Headphones simply hold the Multifunction Button down for 3 seconds. The LED Indicator will flash BLUE 3 times, and you'll hear the message "Power On" through the Headphones.

To turn off the Headphones simply hold the Multifunction Button down for 3 seconds. The LED Indicator will flash RED 3 times, and you'll hear the message "Power Off" through the Headphones.

Connecting with Bluetooth

1. Press the Multifunction button to turn the headphones ON
2. Hold down the Multifunction Button for 7 Seconds and the LED light will flash Red and Blue The Headphones are trying to look for a device to connect to.
3. Go to the Bluetooth option in the settings of your Bluetooth Audio device or smartphone and in the list of Devices select SB250
4. The Headphones are now ready to use

Connecting with NFC (optional)

To connect the Headphones with NFC enabled devices. Ensure the NFC feature is enabled and simply touch the right side Headphone area marked NFC against your device for 2 second.

Connecting with Audio Cable

To connect the Headphones to devices that do not support Bluetooth. Plug the provided Audio cable into the Headphone port on the left and connect the other end of the cable into the audio device.

Note: The audio cable will allow you to listen to music even if the Headphone Battery is out of power. Also allows you to use the Headphones in places where wireless signals are restricted such as Hospitals and Aircraft.

Description of Headphone functions

Adjust volume

Press the volume +/- key to adjust the volume. One short press will adjust one level. When the volume reaches max or minimum volume the Headphones will play a chime.

Play/Pause music

Press Multifunction Button one time to Play or Pause music.

Previous/Next song

When playing music you can press “forward” button to play next song and “backward” button to play previous song.

Virtual 3D sound

To enable the 3D sound function hold the “previous” button for 1 second to switch the 3D to ON or hold the "Next" button for 1 second to switch the 3D OFF.

Sleep mode

If the Headphones are powered on but no audio is being played the Headphones will enter Power Saving Sleep mode after 10 minutes. To activate the Headphone just push the Multifunction Button and the music will resume.

Using Audio Cable

Receive a Phone Call

If you are listening to music when there is incoming Phone call or you are making a Phone call, the Headphones will automatically switch the connection from the music player to the Phone. The Music will be paused temporarily. After you end the call, the music resumes.

Note: when you press Multifunction Button to answer or end a call, please just press one time. Do not press and hold.

Make a phone Call with the Headphones

Use the Phone's keypad to dial the phone number.

Press Phones "SEND" or "OK" key. The Phone begins the call and automatically transfers the call from the Phone to the Headphones.

Voice dialing (dialing a number by saying a name)

It is possible to make a call directly from the Headphones using voice recognition. To use this voice dialing function, your Phone must provide this option.

1. Enable voice recognition function of your Phone and set the Phone to hands free mode.
2. Double press the Multifunction Button of the Headphones, you will hear a tone.
3. Say the name of the person you wish to call loudly.

End a Call

Use either of the following methods to end a call;

- Press Multifunction Button one time to end a call from the Headphones.
- End a call from the Phone's screen.

Refuse a call

When there is incoming call, press and hold Multifunction Button for about 2 seconds until you hear prompt from the Headphones. Release the Button and the call is refused.

Redial the last Number

Press and hold volume + Button for 2 second to redial the last dialed number.

Microphone mute

In a call mode, press and hold volume - key for 2 seconds until you hear prompt from the Headphones, you can switch to open and close mute function.

Switch Phone call between Phone and Headphones

In call state press and hold Multifunction Button for 2 seconds until there is prompt from the Headphones. The call will be switched from Headphones to Phone or vice versa.

Charging the Headphones

To charge the Headphone use the supplied USB cable and insert into any powered USB Port normal charging process takes abort 2-3 hours. The red LED will turn on when charging and will turn off when charging is complete.

When the battery is low the Red LED will flash and there is also an audio prompt from the Headphones. Recharge the Headphones this time. Make sure the battery has been fully charged and fully released at the beginning three times of use to ensure the battery the best performance.
After charging is complete please remove the cable from the Headphones and the USB Cable from the USB port. Do not keep the Headphones connected to the USB port for a long time when charging complete as this will shorten the lifetime of the Battery.

CAUTION

- Avoid placing this product near extreme temperatures or humidity.
- Do not use this product while operating a motor vehicle
- Do not submerse or allow this product to come into contact with water. Use in dry locations only.
- An adult should supervise young children when using this product.
- Use of any attachment or accessory with this product not recommended or sold by White Label may result in risk of fire, electrical shock or injury to persons or product.
- Do not clean any parts with alcohol, cleaning solutions containing alcohol or strong abrasives. Use a soft cloth and a little water
- There are no user serviceable parts within this product. Tampering with this product will invalidate your White Label warranty.

Visit http://www.kickbot.com for product info and warranty. SoundBot is a registered trademark and the property of KickBot. Bluetooth trademark and tradename is the property of Bluetooth SIG. All other marks are the properties of the prospective manufacturers. All rights reserved.